



# **NEW FUNCTIONS IN SE5000-8 RG**

- Start and end country reminder
- Border crossing assistance
- Automatic Local Time Adjustment (ALTA)
- Driver Timer Display (DTD)

 
Please see the driver and company manual for further details.

## START AND END COUNTRY REMINDER

 
The start and end country reminders are a new function to remind the driver to enter a start or end country if the card is left in the tachograph during the daily rest.

#### Start

If the card has been inserted for 180 minutes or more and the tachograph has been recording rest activity for that period, you will be prompted with begin place when you turn the ignition on. Confirm if you wish to register a begin place, and thereafter confirm the country.












Please note, the display in the above red box is in English for all languages in SE5000-8 RG.


### **End**

  If you set the activity to rest and then turn the ignition off, you will be prompted to register the end place. This will also trigger if you change the activity to rest

 
after you turned the ignition off. Confirm if you wish to register an end place and thereafter confirm the country.












Please note, the display in the above red box is in English for all languages in SE5000-8 RG.

## **Settings/Options**

 The default setting displays the country prompt for 30 seconds, or until the driver confirms or cancels the reminder. The setting for the function can be changed with a company or workshop card.

The options are the following:

- OFF (no reminders)
- ON (reminder will be displayed until confirmed or cancelled)
- 30sec (reminder will be displayed for 30 seconds or until confirmed/cancelled)
- 2min (reminder will be displayed for 2 minutes, or until confirmed/cancelled)

















Please note, the display in the above red boxes are in English for all languages in SE5000-8 RG.

### BORDER CROSSING ASSISTANCE

120 seconds after the GNSS in the tachograph has detected that the vehicle has crossed a border, the border cross assistance function will activate.

 
This will prompt the driver at the first standstill to confirm the new country.





prompting at every standstill until confirmed, as it's a legal requirement from 2 February 2022 to confirm a border crossing.

If the driver does not confirm the prompt, it will continue



## **AUTOMATIC LOCAL TIME ADJUSTMENT (ALTA)**

 
There is a new option in the SE5000-8 RG to allow the tachograph to automatically handle all local time adjustments.

A new menu local time function, available for all users, is created with three options.

 
- OFF No adjustment or prompts
- DST Prompts for daylight saving time. This has been the standard setting in the SE5000
- ALTA Automatic adjustment of local time according to time zone and daylight-saving time





 












Please note, the display in the above red boxes are in English for all languages in SE5000-8 RG.

# **DRIVER TIMER DISPLAY (DTD)**

The Driver Timer Display is a new display to assist the driver in keeping track of the drive and rest time when outside of the regular DDS calculation.

To activate the timers, press down/up from the main display until you reach the DTD, then long press OK until timers are shown.

To deactivate the function, press down/up from main display until you reach the DTD, then long press OK until timers reset and –h— is shown instead of digits.

The left side timer will count down a 4-hour and 30-minute drive period since activation, or count down a 45-minute break, or 30-minute break if the previous break was a 15-minute break.

The right-side timer will count from 00h00 until 99h59.

